OPERATING YOUR SYSTEM WITH *MX-850*

UNIVERSAL remote control

This remote control was Custom Programmed for you by:

.....

For questions about your Custom Programming call:

.....

Custom Programming of a complex home theater and/or a multi-room system is one of the most challenging tasks within an audio/video installation. It involves an intimate knowledge of how the components interact and exact details on the proper sequences of control.

Only a professional custom installation company has the requisite experience and training to quickly and effectively customize a remote control for true automated operation.

Congratulations on your choice!

OPERATING YOUR SYSTEM WITH THE MX-850

© 2004-2013 Universal Remote Control, Inc. All rights reserved.

The information in this owner's manual is copyright protected. No part of this manual may be copied or reproduced in any form without prior written consent from Universal Remote Control, Inc. UNIVERSAL REMOTE CON-TROL, INC. SHALL NOT BE LIABLE FOR OPERA-TIONAL, TECHNICAL OR EDITORIAL ERRORS/OMIS-SIONS MADE IN THIS MANUAL. The information in this owner's manual may be subject to change without prior notice. Home Theater Master is a registered trademark of Universal Remote Control, Inc. Entertainment Made Simple is a trademark of Universal Remote Control, Inc. All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

500 Mamaroneck Avenue,
Harrison, NY 10528
Phone: (914) 835-4484
Fax: (914) 835-4532

Table of Contents

No More Pointing	1
Finding the MAIN Menu	2
Turn On the System	3
Using the MAIN Menu	4
Select a New ACTIVITY	4
Select a DEVICE Only	5
Controlling the Volume	6
Operating Any Device	6
Using FAV - Favorites	8
Backlighting	10
Changing CONTRAST	10
Batteries	11
Cleaning the Screen	11
Warranty	12
End User Agreement	16
Specifications	16

No More Pointing!

The combination of the MX-850 with it's companion MRF-250 base station will enable you to place your audio/video components out of sight behind closed doors and/or in another room of your house. The MX-850 sends radio signals to the MRF-250 through walls and closed doors (50-100' away, indoors or outdoors). The MRF-250 converts your commands to the infrared signals that control your A/V components.

1. The MX-850 remote control sends radio waves in every direction, so you don't have to point the remote anymore!

The MX-850

2. Self-adhesive "Flashers" affixed to the front panels of components relay commands to components out of "line-of-sight" with the MRF-250.

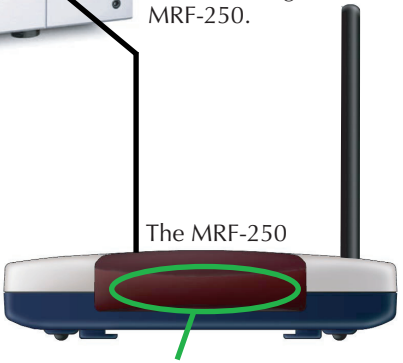

The MRF-250

3. The built-in Front Blaster sends commands to components in the same cabinet space as the MRF-250.

Finding the MAIN Menu

The MAIN Button always takes you to the MAIN Menu which may be named for the room the MX-850 controls.

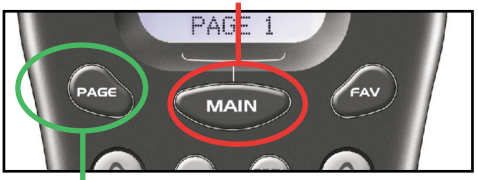

The PAGE button switches between two MAIN Menu pages IF you have more than ten remote controls. When the top title bar says MAIN or the name of a Room, you are on the MAIN Menu.

The lower title bar displays PAGE 1 or PAGE 2 as you switch. Each of the remote controls the MX-850 replaces are represented by a button next to the corresponding screen label.

Turn On Your Entire System

Power on/off your entire system with the MAIN Menu by following these steps:

1. Touch the MAIN button to make sure that you are on the MAIN Menu. It doesn't matter which page of the MAIN Menu is displayed.

2. Touch the On or Off button as desired. Wait until all components are correctly powered on or off. Turning on the system may take ten to twenty seconds.

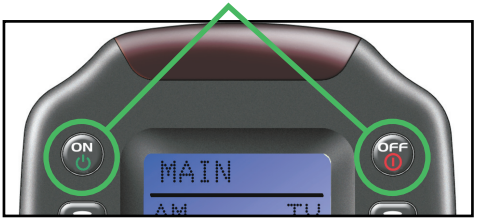

3. If one component does not turn on/off, simply touch the button again.

TIP – *The remote control will not respond to a new button push while is still issuing commands. While busy, the indicator flashes at the top of the screen next to the screen title.*

Using the MAIN Menu

The MAIN Menu enables you to either select a new Activity or simply select a new Device to control.

When you select a new activity, the remote control will issue a MACRO (a timed sequence of many commands from many different remote controls). This MACRO was custom programmed for your system by your installer. It will issue all of the commands necessary to switch the sound and picture of your system.

When you select a device, the remote control becomes the remote control you select WITHOUT affecting the home theater.

Select a New ACTIVITY

1. Touch the MAIN button to make sure that you are on the MAIN Menu. Touch the PAGE button if you don't see the activity you want.

2. Touch the activity button next to the desired screen label. For example if you wish to watch a DVD movie, touch the DVD button.

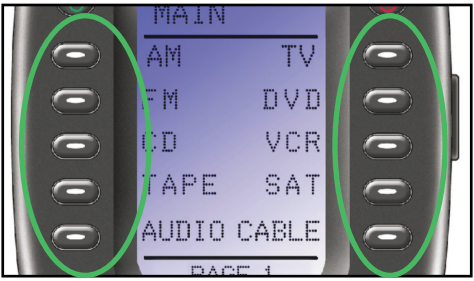

The MAIN Menu activity buttons issue MACROS that reset the sound and picture of your home theater to a new activity.

TIP – *The remote control is still issuing commands while the* *indicator flashes.*

If the sound or the picture still are not correct, repeat steps 1 and 2.

Select a DEVICE Only

1. Touch the MAIN button to make sure that you are on the MAIN Menu. Touch the Page button if you don't see the activity you want.

2. Press and hold the MAIN button. While holding the MAIN button down, touch the button next to the desired screen label. The remote control will now display the name of the selected device and all buttons will operate the device, however, the sound and the picture of your system have not been changed.

Controlling the Volume

For your convenience, the VOLUME Up, VOLUME Down and the MUTE buttons will always control the surround sound system, regardless of what activity or device you are controlling.

Operating any Device

You can see the name of the device at the top of the screen. If it is not the one you want, return to the MAIN Menu and select a new device or activity.

All of the printed label buttons on the remote operate just like the original remote control (with the exception of Volume Up, Volume Down and Mute which operate your surround sound system).

The Power ON and OFF buttons now operate only the selected device (to turn the entire system on/off, return to the MAIN Menu).

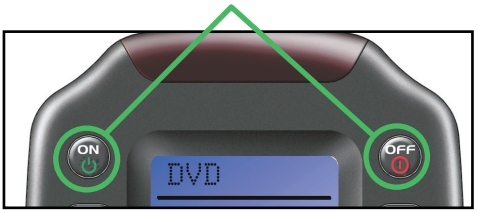

The ten screen labeled buttons are now labeled with any commands that do not fit one of the buttons with printed labels.

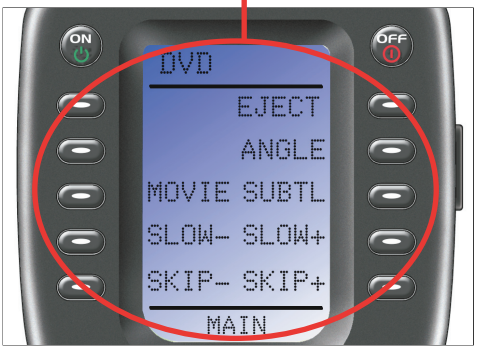

Up to 40 screen labeled buttons are available for each device. To view the additional buttons, press the PAGE button to display additional pages. The remote control can display up to four pages of screen labeled buttons for each activity or device! As you scroll through the pages, notice that the bottom title bar displays which page you are viewing (PAGE 1, PAGE 2, etc.).

The thumbpad easily operates on screen menus with either the Left or Right hand. When you are operating a device with any kind of on-screen menu, guide or display, the thumbpad offers you easy one-handed control with your thumb.

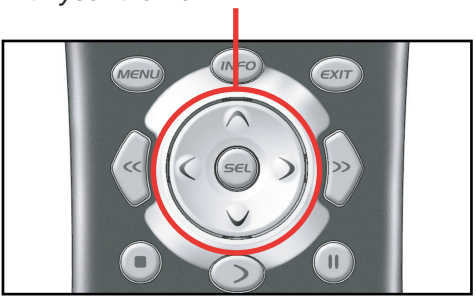

To SELECT or say OK, simply press the center SEL button. You'll feel the click as the OK/SELECT/ENTER command is sent.

Using FAV - Favorites

The favorites menu is created uniquely for you by your custom installer. The screen labeled buttons now issue timed sequences of commands that will reset your system with one touch. Typically, the favorites menu is programmed with one touch "shortcut" buttons that issue all of the necessary commands to change the channel of your satellite dish or television. Thus, instead of entering a two or three digit number (which you must remember) and the enter command, you simply select the favorite button labeled HBO, CNN, TNT etc.

The Favorite menu can be programmed with any favorite activity. It is not limited to channel favorites. Your custom installer may invent a feature unique to

your system. Discuss any non-channel favorite label with your installer, so that you understand how to use it.

To use the FAVORITE Menu:

1. Press the FAV button. The top title bar will now display FAV.

Use the FAV button and the PAGE button to navigate through your various pages of FAVORITES. The FAV button scrolls up from Page 1 to Page 5, using the PAGE button scrolls down from Page 5 to Page 1. As you select a new page, the bottom title bar will display the page number (page 1, page 2, etc.)

To EXIT Fav and return to the last activity/device selected, press the MAIN button ONCE. To EXIT Fav and go to the MAIN Menu, press the MAIN button twice.

Backlighting

Turn on the backlighting by pressing the LIGHT button on the right side of the the remote control. The backlighting will stay on briefly, then turn off automatically. If you wish to turn it off without waiting, simply tap the LIGHT button again.

** Note that your battery life is reduced by how often you use the backlighting.*

Changing Contrast

Press and Hold BOTH the MAIN and the UP thumbpad button at the same time to make the screen DARKER.

Press and Hold BOTH the MAIN and the DOWN thumbpad button at the same time to make it LIGHTER.

Batteries

If the batteries are running low, the screen will display a warning at the bottom of the screen whenever you press the Power ON button. You may also experience a slight drop in the operating distance of either the MX-850 remote control when the batteries are running low.

Please replace all of the batteries with fresh, new AAA batteries. Do not mix old and new batteries.

The MX-850 will retain all programming even if the batteries are removed for an extended period.

Cleaning The Screen

Do not use abrasives or liquid cleaning solutions!

Use a dry soft lint-free cloth to clean the screen. Be careful not to use excessive force. The screen is glass and is easily breakable.

Limited Warranty Statement

1. Limited Warranty and Disclaimers
Universal Remote Control, Inc. ("URC") warrants that the URC equipment shall be free from defects in material and workmanship under normal usage for one (1) year from purchase when such is purchased from URC. **This limited warranty is valid only in the United States of America.** URC warrants that the software will substantially conform in any material respect to its functional specifications at the time of delivery. URC SHALL NOT BE LIABLE FOR OPERATIONAL, TECHNICAL OR EDITORIAL ERRORS AND/OR OMISSIONS MADE IN THE URC DOCUMENTATION. URC DOES NOT WARRANT THAT THE URC SOFTWARE IS BUG-FREE OR ERROR FREE OR THAT THERE ARE NO ERRORS/BUGS IN THE URC SOFTWARE.

URC warrants that at the time of purchase the URC equipment and the URC software complied with all applicable regulations and policies of the Federal Communications Commissions ("FCC") regarding electromagnetic interference caused by electronic/computing devices and to the extent that the URC equipment and/or the URC software fails to so comply, URC shall, at its own expense, take all reasonable measures to promptly cause such to comply.

URC equipment purchases from other than an authorized URC dealer or distributor are without warranty.

THIS LIMITED WARRANT DOES NOT COVER TECHNICAL ASSISTANCE FOR HARDWARE OR SOFTWARE USAGE EXCEPT AS EXPRESSLY PROVIDED FOR HEREIN, THE EQUIPMENT, SOFTWARE AND DOCUMENTATION OF URC ARE

SUPPLIED “AS IS” WITHOUT ANY WARRANTY, EXPRESS, STATUTORY OR IMPLIED, OF ANY KIND. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, URC EXPRESSLY DISCLAIMS ALL WARRANTIES, EXPRESS, STATUTORY OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. URC DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF, OR THE RESULTS OF THE USE OF, THE EQUIPMENT, SOFTWARE OR DOCUMENTATION IN TERMS OF CORRECTNESS, ACCURACY, RELIABILITY OR OTHERWISE.

EXCEPT AS EXPRESSLY PROVIDED FOR HEREIN, TECHNICAL SERVICES ARE SUPPLIED “AS IS”, WITHOUT ANY WARRANTY, EXPRESS, STATUTORY OR IMPLIED, OF ANY KIND. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, URC EXPRESSLY DISCLAIMS ALL WARRANTIES, EXPRESS, STATUTORY OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF QUALITY OR REASONABLE SKILL AND CARE, OR OUTCOME OR RESULTS. WITHOUT IN ANY WAY LIMITING THE GENERALITY OF THE OTHER PROVISIONS HEREIN, WARRANTY DOES NOT COVER: (I) DAMAGE FROM MISUSE, NEGLECT OR ACTS OR NATURE, (II) MODIFICATIONS, (III) INTEGRATION WITH THIRD PARTY CONTENT (IV) BEYOND THE WARRANTY PERIOD AND/ OR FAILURE TO FOLLOW URC WARRANTY CLAIM PROCEDURE.

The warranty limitations and warranty disclaimers may not apply to end user in whole or in part, where such are restricted or excluded by applicable law and such shall apply to the maximum extent permitted by applicable law.

In the event of any warranty claim, URC will, at its sole option, repair the URC equipment using new or comparable rebuilt parts, or exchange the URC equipment for new or rebuilt equipment. **In the event of a defect, these are the end user's exclusive remedies.**

All the URC equipment returned for service, exchange or repair require an RGA number. To obtain an RGA number, you must complete a Return Request Form which you may obtain by calling (914) 835-4484 or contacting URC at returnrequest@universalremote.com. To obtain warranty service, end user must deliver the URC equipment, freight prepaid, in its original packaging or packaging affording adequate protection to URC at 420 Columbus Avenue, Valhalla, NY 10595. It is end user's responsibility to backup any macro programming, artwork, software or other materials that may have been programmed into the unit. It is likely that such data, software, or other materials will be lost during service and URC will not be responsible for any such damage or loss. A dated purchase receipt, bill of sale, installation contract or other verifiable proof of purchase is required. For the URC equipment support and other important information, please visit URC's website available at www.universalremote.com or call the Customer Service Center at (914) 835-4484.

This limited warranty only covers the URC equipment issues caused by defects in material or workmanship during ordinary consumer use. It does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, third-party installation, misuse, limitations of technology, or modification of or to any part of the URC equipment. This limited warranty does not cover the URC equipment sold as used, as is, refurbished, so called "B stock" or

consumables (such as batteries). This limited warranty is invalid if the factory applied serial number has been altered or removed from the URC equipment. **This limited warranty specifically excludes the URC equipment sold by unauthorized resellers.**

With the exception of URC's IR-only, broad-based consumer remotes, none of URC's PC programmable remotes or any of our Total Control® whole-house equipment are authorized for online internet sales. Buying URC's PC programmable remotes or any of our Total Control® whole-house equipment online means buying equipment that does not have a URC's limited warranty. Such equipment is not eligible for URC tech support or software support, either.

2. URC'S Limitations of Liability
IN NO EVENT SHALL URC BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND OR LOSS OF PROFITS OR BUSINESS OPPORTUNITY, EVEN IF URC IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT SHALL URC BE LIABLE FOR LOSS OF OR DAMAGE TO DATA, COMPUTER SYSTEMS OR COMPUTER PROGRAMS.
URC'S LIABILITY, IF ANY, FOR DIRECT DAMAGES OF ANY FORM SHALL BE LIMITED TO ACTUAL DAMAGES, NOT IN EXCESS OF AMOUNTS PAID BY END USER FOR THE URC EQUIPMENT.

IN NO EVENT SHALL URC BE LIABLE FOR ANY EVENTS BEYOND ITS CONTROL, INCLUDING ANY INSTANCE OF FORCE MAJEURE.
IN NO EVENT SHALL URC BE LIABLE FOR THE ACTS OR OMISSIONS OF END USER OR ANY THIRD PARTY.

THE LIMITATIONS OF LIABILITY MAY

NOT APPLY TO END USER IN WHOLE OR IN PART, WHERE SUCH ARE RESTRICTED LIMITED OR EXCLUDED BY APPLICABLE LAW AND SUCH SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.

URC SHALL NOT BE HELD RESPONSIBLE FOR THE STATEMENTS MADE BY OTHERS.

SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO END USER. THIS LIMITED WARRANTY GIVES END USER SPECIFIC LEGAL RIGHTS AND END USER MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR JURISDICTION TO JURISDICTION.

End User Agreement

The terms and conditions of the End User Agreement available at www.universalremote.com/eua.php shall apply.

Specifications

Range: 50 to 100 feet, depending upon the structure of your house and the amount of interference present

Weight: 8 oz. (with batteries)

Size: 9.0” x 3.0” x 1.3”

Batteries: Four AAA Alkaline batteries included

LCD Size: 1.4” x 2.1”

RF Frequency: 418MHz

500 Mamaroneck Avenue,
Harrison, NY 10528
Phone: (914) 835-4484
Fax: (914) 835-4532

OCE-0031A Rev 06